

Mighty Mite

Impeller Access

The plastic casing can be removed by placing fingers under the 'lid' and gently prying it off.



You will then be able to see the inner workings of the pump.

Remove this section from the plastic casing.



Hold the pump facing towards you.


Unscrew this section.




Twist the plastic casing 180 degrees.



You will then be able to pull the plastic casing forwards and access to the impeller will now be possible.

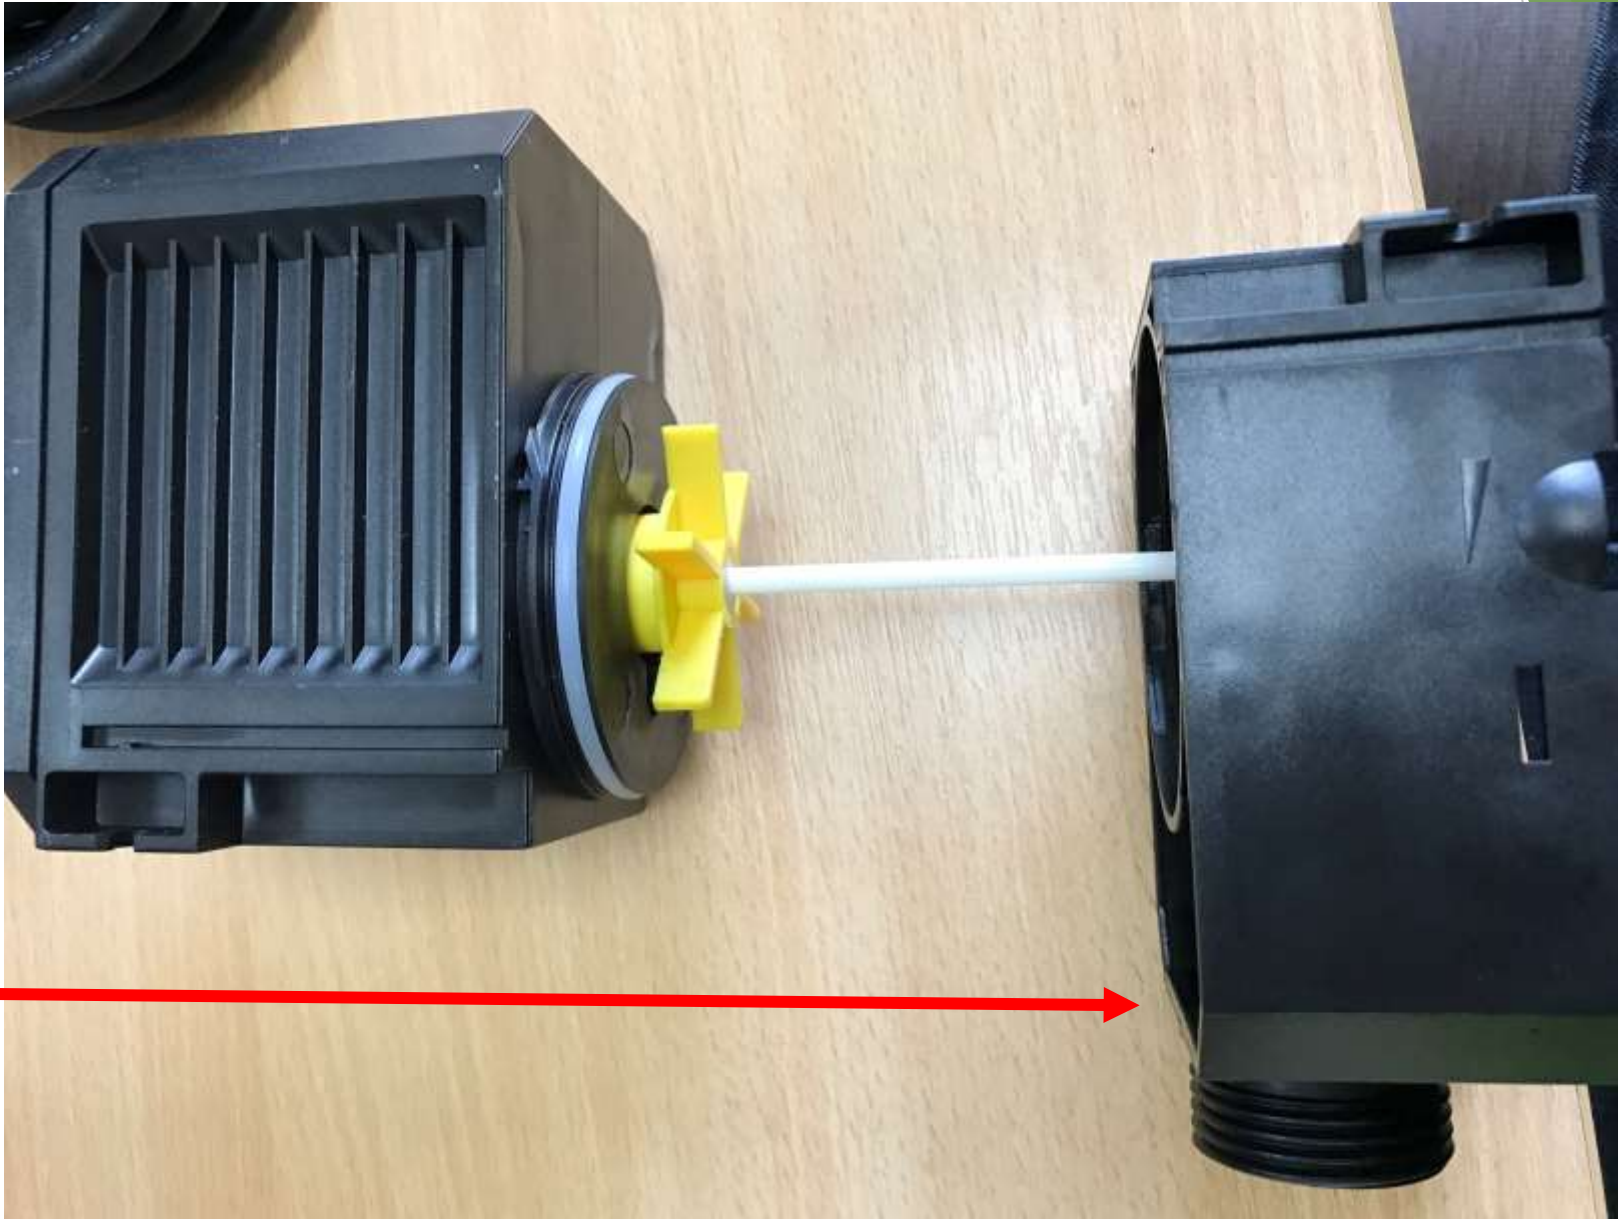

Remove
the plastic
casing and
white pole.

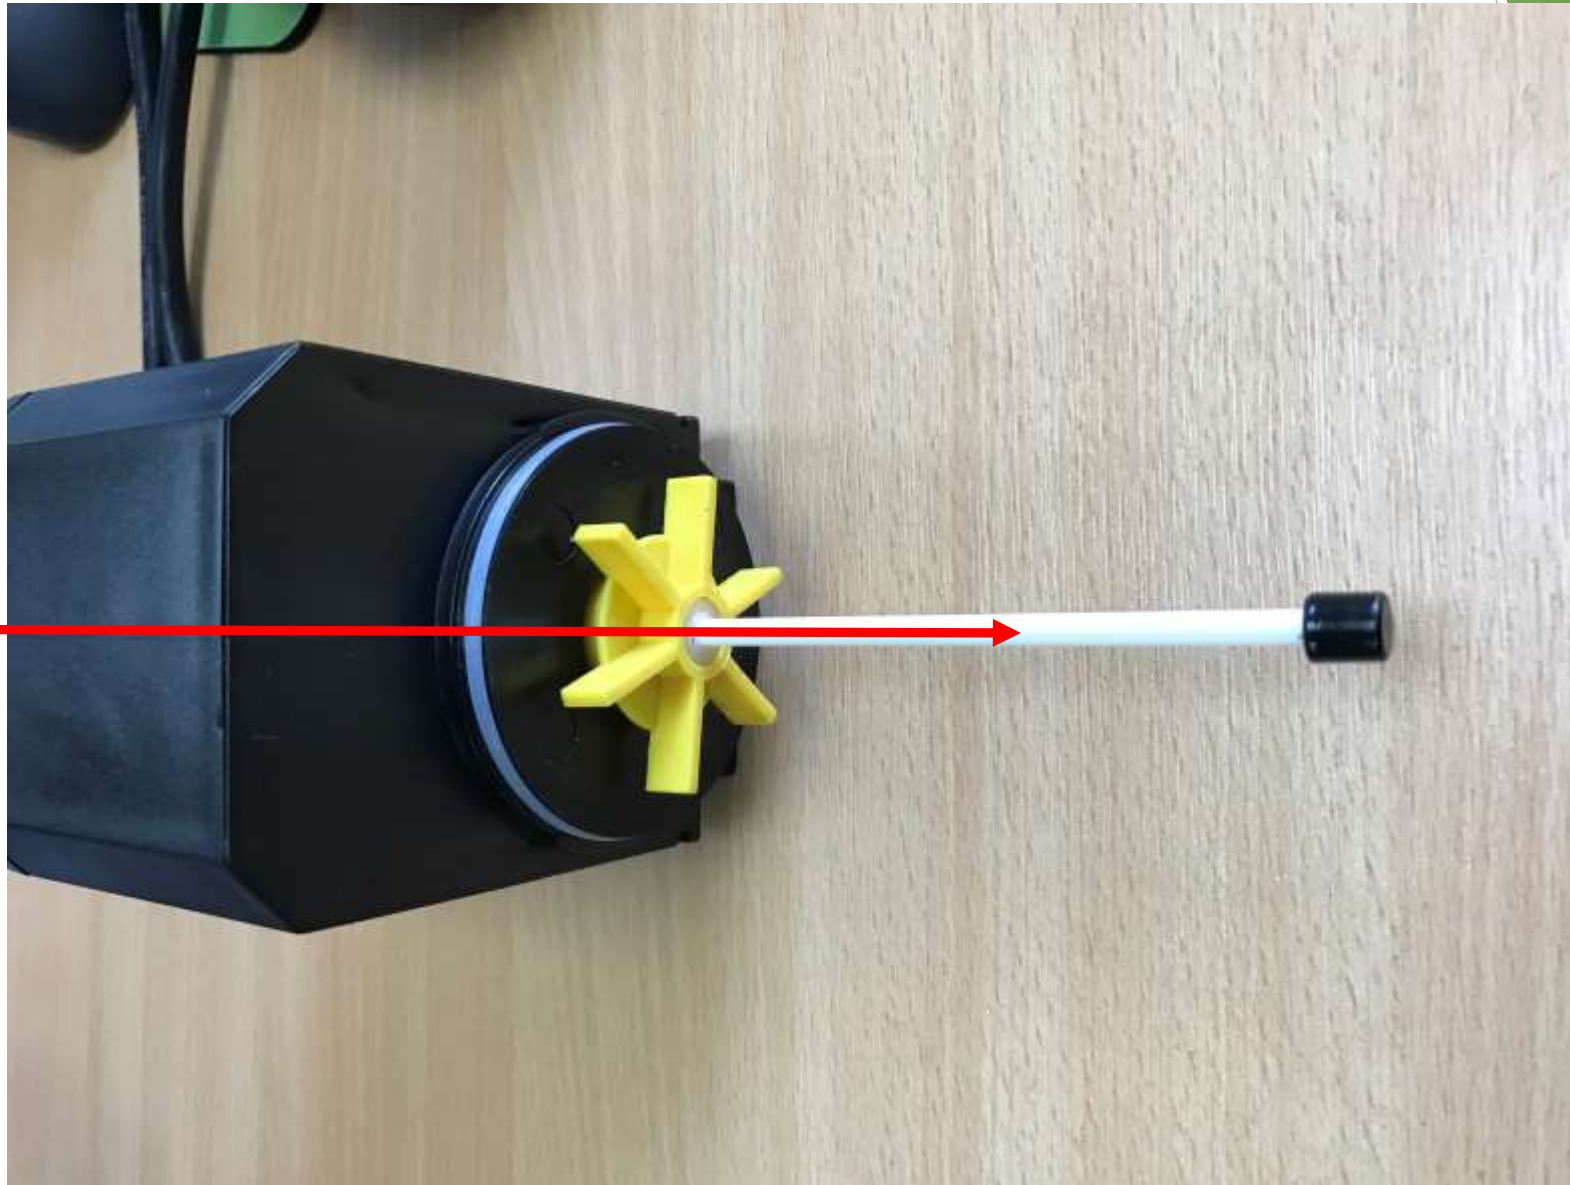

You will now be able to simply pull the impeller out (there will be a slight magnetic pull, this is normal)

