

PondXpert Flowmaster 3500, 4500 & 5000

How to set up your PondXpert Flowmaster Pump



First step

Within the box there will be the main pump unit and an assortment of attachments which we will go through in further detail.



If you look to the front of the pump you will notice a screw fit blanking plate.

This inlet is to be used for cleaning and can be removed during this time whilst out of the water.

There is the option to use the Flowmaster with or without a fountain attachment.



Fountain requirements

Fountain required

Affix union nut to the top of the unit and turn clockwise to tighten



Fountain required



Attach the 'T' piece via the larger end push fitment to the union nut.

This allows the main fountain attachment pipe to be added.

Fountain required



This locking nut needs to be placed over the 'T' piece prior to the fountain attachment pole.

Fountain required



1) There should be two poles in the box with the pump, as shown above.



2) The two poles need to be pushed together as above.



3) The finished items should look as above.

Fountain requirement



The fountain attachment push fits via the larger end on to the t' piece fitment.



The fountain attachments can be fitted to the top of the pole attachment.

The stepped hosetail can be attached along with the supplied 'O' ring to the top of the unit as shown.

Once the hosetail has been attached this can be adjusted to fit your chosen hose width.



No fountain attachment

Extra fitments

The extra fitment shown above is to allow the attachment of lights to the pond pump; lights are sold separately.



The fitment slides over the fountain attachment as shown above and the lights will clip on if required.



The lights required are the PondXpert Sublight 20. These are provided with interchangeable coloured lenses.