



Operating instructions (Figure 1, page 5.)

Important: Do not immerse the air pump in water, protect it against flooding. Place the pump on a firm surface above the water surface.

- Place the pump in an area that is protected against flooding.
- Make sure that the pump draws clean and pure air.
- Place the air pump on a flat level surface above the water level.
- Secure the air pump to prevent it from walking.
- Connect the rubber hose coupler to the pump outlet and secure it with the supplied hose clamp.
- Slide the other hose clamp over the rubber hose coupler.
- Connect the air distributor to the other side of the rubber hose coupler and secure it with the hose clamp.
- Connect the air stones to the air diffuser with air hoses.
- Place the air stones in the water.
- If the air pump is properly installed and connected, it can be switched on by plugging in the power plug.



Maintenance (Figures page 5.)

Regular maintenance:

- Turn off the air pump by unplugging the power cord from the electrical outlet.
- Regularly clean the foam filter (4): Unscrew the two screws (2) of the cover (3) and remove the cover (3) of the casing (5). First, remove the caps (1) from the screws before the screws can be loosened.
- If the foam filter (4) is dirty, take it out and clean it with air or replace it for a new foam filter (4).
- After cleaning, place everything back, fix the cover (3) with the two screws (2).
- If the air pump is properly installed and connected, it can be switched on by plugging in the power plug.

To ensure a long life span and problem-free operation, we recommend that you check the pump regularly for air capacity reduction by checking whether the air stones are producing enough air bubbles.

- If the air capacity has decreased, check the air stones and replace, if necessary. Clogged air stones will lead to low air pressure output in the pump and reduce the life of the diaphragms and pump.
- Switch off the air pump by unplugging the power cord from the electrical outlet before doing any maintenance.

If replacement of the air stones does not improve the air capacity, check the air pump and replace the membranes.

- Turn off the air pump by unplugging the power cord from the electrical outlet.
- Unscrew the four screws (6) of the pump housing (5) and remove the pump housing (5) of the bottom plate (23).
- Remove the four screws from the motor flap (9) and remove the motor cap (9). (Note that the four nuts (18) remain at their place).
- Lose one of the two motors (11) by removing the 2 screws (12).

- Unscrew the 4 screws (8) from the membrane housing on both sides of the motor cap (9).
- Take the membrane unit (13) from the motor cap (9) and replace it with a new one.
- Place the new membrane unit (13) in the motor cap (9) and tighten the eight screws (8).
- Place the motor (11) back and secure it with the two screws (12).
- Place the motor cap (9) back (note the two o-rings (14) and tighten the screws (note the nuts (18).
- Place the pump housing (5) back and fasten it with the four screws (6).
- If the air pump is properly installed and connected, it can be switched on by plugging in the power plug.



In the winter

- Protect the air pump from frost.
- Do not allow the air pump to draw hot air, as this will cause condensation in the air hose to the pond or filter and the hose may likely clog up or freeze in the winter.



Removal and storage of waste

All household electrical appliances must be removed in accordance with EU directives. The product may not be disposed of with the normal household waste, but should be collected separately.

You are personally responsible for bringing the device to a designated landfill site. It must be dismantled and processed in an environment-friendly manner.

More information on local landfill sites can be obtained from the municipality in which you live.

Limited Warranty

This product is guaranteed for a period of 12 months from the date of purchase for material or manufacturing defects. The guarantee covers the substitution of defective parts.

However, the guarantee is considered null and void in the case of improper use, improper handling or negligence on the part of the buyer. If your pondXpert air pump fails please take it back to the retail outlet from where it was purchased. You will be required to take your receipt/proof of purchase with you.

This does not affect your statutory rights.

PondXpert
A3 Bentley Avenue
Billingham
TS23 4BU
UK

01642 370898 www.pondxpert.co.uk